

How to Format an SD Card – Panasonic LUMIX

1. Flick the power switch to ON.



2. Turn lens to the left to extend.



3. Press centre button for Menu.



4. Tap the blue wrench as shown.




5. Tap the right menu until it shows page 4/4.



6. Select the Format option.

7. Tap yes.

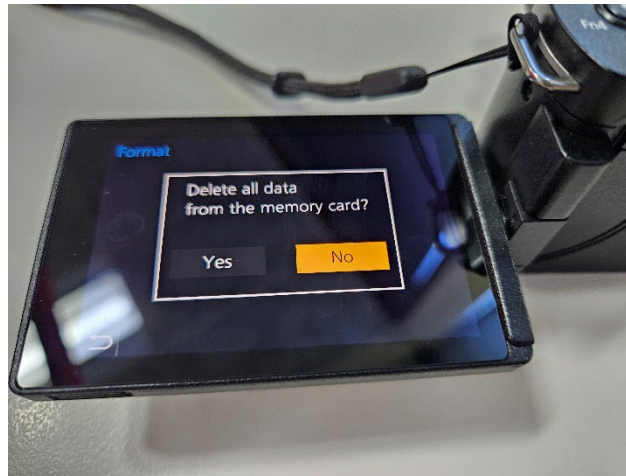

8. SD card will format, then return to main screen.

9. Turn the lens to the right to retract.

10. Flick the power switch to OFF.